


FUEL SYSTEM

AIR CUT-OFF VALVE

Remove the two screws attaching the air cut-off valve cover and the cover.

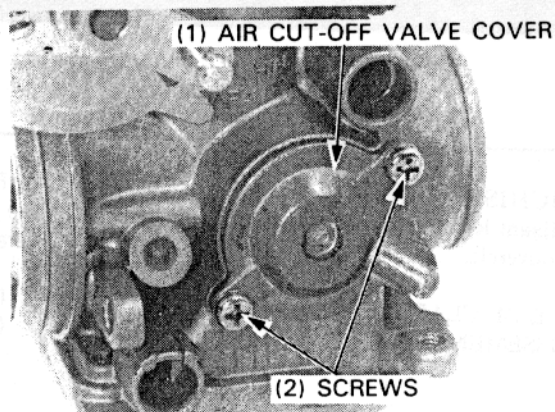


Remove the spring, diaphragm and O-ring.
Check the diaphragm for pin holes or other damage.

Assemble the air cut-off valve in the reverse order of disassembly.

NOTE


- Install the O-ring with its flat side toward the carburetor body.

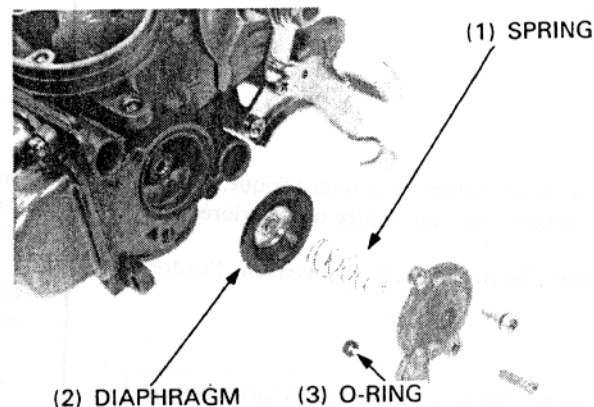

CARBURETOR ASSEMBLY

Blow open all passages with compressed air before installing jets and valves.

Reassemble the primary and secondary carburetors in the reverse order of disassembly.

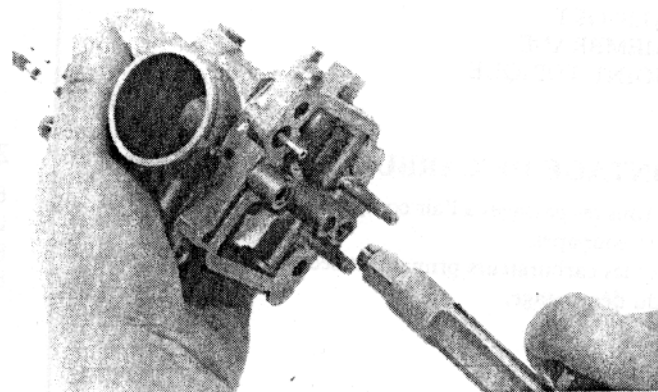

Coat new O-rings with oil and install them on the air joint and fuel joint pipes.

Put the primary and secondary carburetors together with the air and fuel joint pipes.

Connect the ball stud on the secondary throttle drum and the ball joint by pushing the ball stud into the ball joint.

