



## FUEL SYSTEM


On the primary carburetor, remove the link arm set screw, the throttle drum assembly, the plastic washer and throttle valve assembly from the throttle bore.

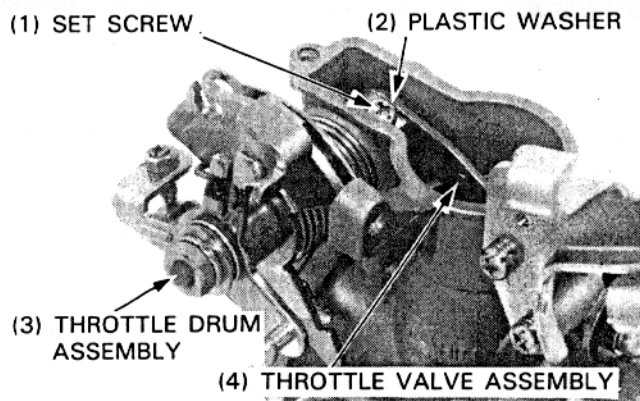

On the secondary carburetor, remove the throttle linkage. Remove the link arm set screw, the plastic washer and throttle valve assembly from the throttle bore.

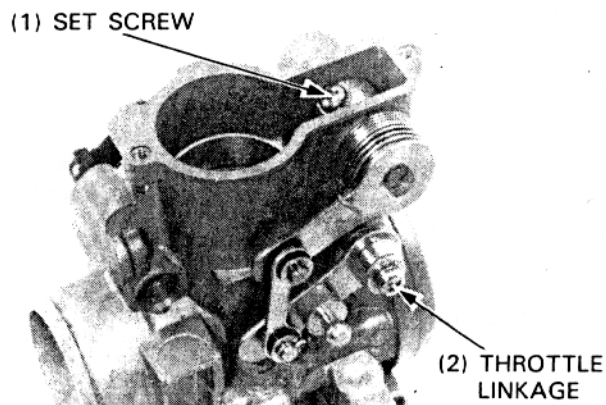

Remove the two screws attaching the link arm to the throttle valve and separate the link arm from the throttle valve.

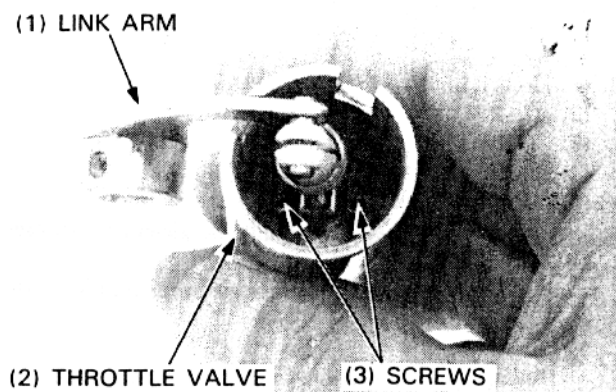

Remove the jet needle set spring and jet needle. Check the throttle valve and jet needle for wear, nicks or other damage.

Assemble the throttle valve in the reverse order of disassembly.

### NOTE

- Install the jet needle clip on the jet needle.  
STANDARD:

Primary	Secondary
4th groove	2nd groove

- Align the hole in the link arm with the threaded hole in the link arm shaft and install the set screw.

